
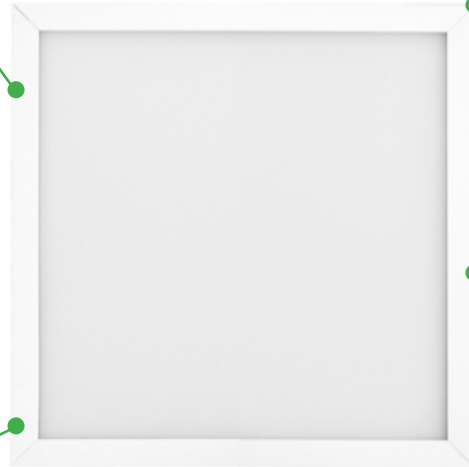
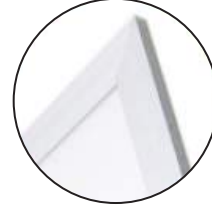


OPTICAL DIFFUSER FOR A UNIFORM
ILLUMINATION WITHOUT DARK SPACE,
>90% LIGHT TRANSMITTANCE

MODERN DESIGN, EXQUISITE WORKMANSHIP

ULTRA SLIM FRAME

HIGH BRIGHTNESS SMD 2835
WITH INCREDIBLE CRI

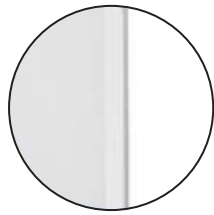

LED PANEL


RECESSED INSTALLATION

INSTALLATION GUIDE



1

RECESSED

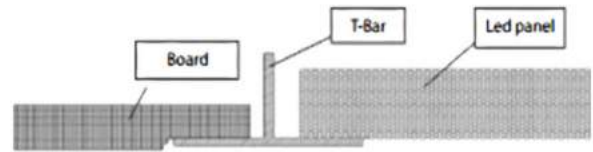


2

DETAIL DRAWING TO SURFACE MOUNTING INSTALLATION

SUSPENDING INSTALLATION


INSTALLATION GUIDE

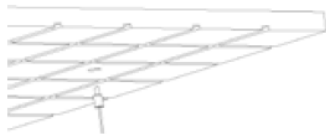

1

DRILL 4 HOLES IN THE CEILING WITH THE DEPTH 35MM AND MAKE SURE NEIGHBORING HOLES SPACE IS ABOUT 497,1x579,3MM, PRESS DOWN PLASTIC ANCHORS IN THE HOLES AND MAKE THEM PARALLEL TO THE CEILING, THEN FIX M3,5 SCREWS ON PLASTIC ANCHORS AFTER CROSSING FIXED BASE.


EXTENDED KIT 1M - Art N° 120071
EXTENDED KIT 2M - Art N° 120071-2
EXTENDED KIT 3M - Art N° 120071-3

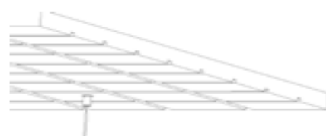

2


FASTEN STRIP AFTER MAKE ITS TERMINAL CROSS THE FIXED BASE.

MOUNTING KIT 30X30CM - Art N° 120066
MOUNTING KIT 60X30CM - Art N° 120067
MOUNTING KIT 60X60CM - Art N° 120068

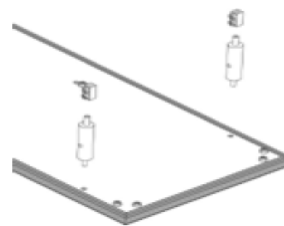

3

TWIST STRIP CONTROLLERS (4 UNITS WITH M3 THRE-AD) INTO THE HOLES ON THE BACK OF LIGHT PAN, MAKE THE STRIP CROSS THE CONTROLLER AND FIT IT, JOIN THE CABLE CLIPS WITH THE STRIPS IN CASE INVALID WORK OF THE CONTROLLER.

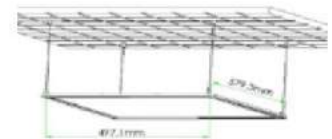

4

ADJUST HEIGHT OF 4 STRIPS TO MAKE THE LIGHT PERFECTLY PARALLEL TO THE CEILING, AND INSTALL LED DRIVER, SWITCH ON THE LIGHT.

MOUNTING KIT 62,5X62,5CM - Art N° 120068-B
MOUNTING KIT 120X30CM - Art N° 120069

SURFACE MOUNTING INSTALLATION

INSTALLATION GUIDE




1

DRILL 4 HOLES WITH DEPTH 35MM IN THE CEILING BY 6 SIZE BIT (HOLES SPACE 520x230 MM).



2

PRESS DOWN PLASTIC ANCHORS IN THE HOLES AND MAKE THEM PARALLEL TO THE CEILING. FIX M3.5 SCREWS ON PLASTIC ANCHORS TILL 5MM OF SCREW HEAD REMAINS OUTSIDE.



3

SLIP THE FIXTURE BY MAKING THE HOLES ON IT MATCH UP THE SCREWS, AND THEN FIX THE SCREWS.



4

PUT THE PANEL LIGHT INSIDE OF THE FRAME.



5

HANG UP THE FRAME ON THE FIXTURE AND FIX THE SCREWS.